

OPTIONAL PARTS MITSUBISHI ELECTRIC MULTI AIR CONDITIONERS **JOINT PIPE KIT(CMY-R160-J1)** CITY MULTI R2 SERIES

MOUNTING INSTRUCTION

This box contains the items below. Please identify the items with the quantity.

①Instruction	②Joint pipe(Small)	③Joint pipe(Large)	④Cover 1	⑤Cover 2	©Cover 3	⑦Band	®Reducer 1	
							OD19.05-ID22.2	OD19.05-ID15.88
This sheet 1pc	1pc	1pc	2pcs	1pc for gas side	1pc for liquid side	8pcs	1pc	1pc

Outdoor unit

heating mode)

Branch pipe(for Y series) CMY-Y102S-G2


Max. 3sets for one branch — connection(With same cooling


Please prepare the following items in the field. (Tape for insulation material sealing (2) Extension pipe for refrigerant circuit

Observe the items below for the mounting work.

- 1. The maximum capacity index for one indoor unit for one pipe connection to BC controller is a size 80 model. Above this index capacity a joint pipe branching kit must be used to create 2 refrigerant pipe circuits from the BC controller.From the same port on BC controller.
- 2. When connecting multiple indoor units, the maximum being 3,
 - (1) 3 units used must have a total connectable index less than 80.
 (2) Connections with total connectable index less than 80. Connections with total connectable index greater than 81 but less than 250 a CMY-Y102S-G2 must be used, as shown in Fig 1.
 - NOTE: Operation of units from the same port of BC controller are linked.
 - IE. Simultaneous heating and cooling is not available.
- 3. For connection information of externally sourced (IE.not included in manufactured product) pipe to BC controller and pipe joints, please refer to Fig 2.
- 4. It is imperative that non oxidising brazing is practiced. Also all pipes must be as free as possible from any foreign materials lE dust, moisture etc.
- 5. Selecting reducers (gas side) Select the proper size reducers based on the total capacity of the downstream indoor units, using the table below as a reference.

Total capacity of indoor units	Reducer
P140 or below	OD19.05-ID15.88
P141-P200	•
P250	OD19.05-ID22.2

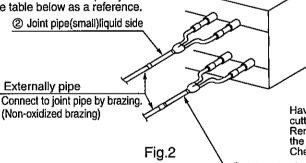

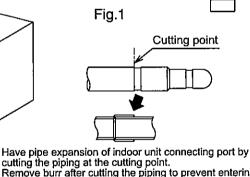

BC controller

Joint pipe kit

CMY-R160-J

cutting the piping at the cutting point. Remove burr after cutting the piping to prevent entering Check that there is no crack at the pipe expansion part.

③ Joint pipe(large)gas side

3 Mounting of cover (insulation material)

Conduct airtight test after connecting the external to the piping, indoor unit, BC controller and outdoor unit. After confirming no leaking, conduct insulation work as follows, Band (Tie it on the pipe cover of unit body.) Unit pipe cover Tape Contact the cover end to the (Field supply) No gap allowed unit body closely. Field piping 6 Tape length 5 and 6 with sealing tape.

2. Remove paper cover from the internal surface of (4)

- 3. Close the two sides of 4 together and hold firmly for 5 seconds to allow glue to adhere.
- 4. Wrap sealing tape around all sections that are jointed, as shown in diagram. NOTE: Ensure that the sealing tape is tight and that the seal

is good, as a poor seal may cause condensation.